

HOW TO USE A MOBILE WI-FI ROUTER

You have been provided with one of the school's mobile Wi-Fi routers (dongles). We will also provide you with a SIM card. Please see the instructions below on how to use this device. You will need to charge the device before you first use it.



1. Open the box and unbox the contents.




2. Please note the Wi-Fi name and password written on the device.




3. Power the device on using the switch on the side.



4. Ensure both lights (signal and power) turn green.

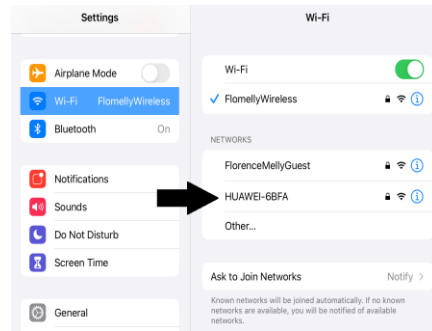

5. On your device, go to the Wi-Fi settings, and select the network

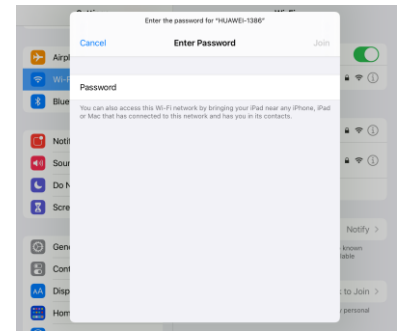

6. Enter the Wireless key on the front of the router.

If you have any issues with your mobile Wi-Fi router, please do not hesitate to contact the school.



7. You should now be able to access the internet.

Mr. Leach at a.leach@fmp.iverpool.sch.uk
 Mr. Baillie at k.baillie@fmp.liverpool.sch.uk
 Miss. Bear at n.bear@fmp.liverpool.sch.uk
 Mr. Doyle at joseph.doyle@fmp.liverpool.sch.uk
 Office at schooladmin@fmp.liverpool.sch.uk